


## Installation:

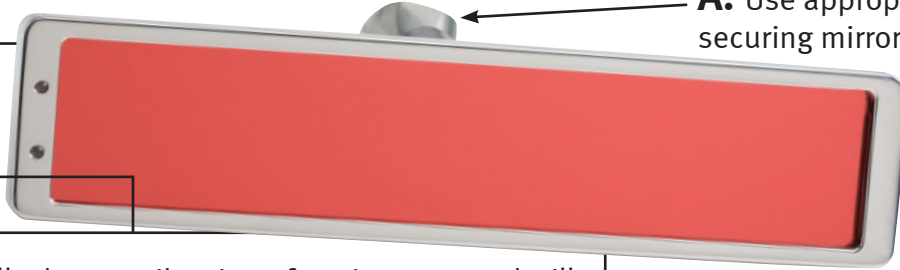

**A:** Use appropriate attachment for securing mirror in place.

## Use:

- 1:** Mirror automatically detects vibration of engine start and will flash twice to signal it is operational.
- 2:** Mirror transitions to “power save” mode 2 minutes after engine vibration is no longer detected.
- 3:** Glare sensors in mirror are designed to work at night, when glare is most prevalent.

## Battery Change:

Continuously flashing, red LED on mirror indicates low battery.



**A:** Unscrew Cover



**B:** Remove cap & slide out mirror.



**C:** Replace Battery

**Caution:** Use dry, clean hands. Avoid touching circuit board.